

Part#: 37BC42



**Part#**  
37BC42

**Description**  
Berm Floor Sealant (Pack of 6)

**Capacity**  
10.3 fl oz.

**Weight**  
8 lbs



Supplied By: **The Cary Company**  
Ph: 630-629-6600  
[www.thecarycompany.com](http://www.thecarycompany.com)

# ULTRA-BERM BUILDER®

CUSTOM CONTAINMENT FOR STATIC OBJECTS



**BUILD A BARRIER AROUND MACHINERY OR EQUIPMENT THAT IS PERMANENTLY MOUNTED OR CANNOT EASILY BE MOVED OR WHEREVER A BERM WALL IS NEEDED**

- Component system provides flexibility to create a semi-permanent, high-visibility custom barrier.
- Durable, vinyl covering resists oils, coolants and most chemicals.
- Cut to length and secure to floor with included sealant, then seal seams with the vinyl adhesive.
- Economical containment for leaks and spills around machinery and equipment - no need to build expensive cement or angle iron curbs.
- High-visibility yellow color draws attention to barrier for increased safety.
- Easy removal requires only a flat-bladed shovel.



Foam-filled sidewalls springs back into shape after being stepped on or rolled over with light, wheeled equipment.

Ultra-Berm Builder®				
Part#	Description	Dimensions	Qty/Box	Weight lbs. (kg)
8640	Full Kit	50' x 5½" x 2" (15.2 m x 140 mm x 51 mm)	1/box	21.0 (9.5)
8641	Straight Section	15' x 5½" x 2" (4.6 m x 140 mm x 51 mm)	1/box	6.0 (3.0)
8642	Corner	7¼" x 5½" x 2" (184 mm x 140 mm x 51 mm)	2/box	2.0 (1.0)
8643	Connecting Collar	10' x 4" (3m x 102mm)	1/box	1.0 (0.5)
8644	Floor Sealant (10.3 fl. oz. tube)	-	6/box	8.0 (3.5)
8645	Vinyl Adhesive (8 oz. can)	-	1/box	1.0 (0.5)

U.S. Patent No. 5,820,297

**Kit Contents (8640):**  
 (2) 25' Ultra-Berm Builder Walls  
 (4) Ultra-Berm Builder Corners  
 (6) Floor Sealant Tubes  
 (1) 10 foot section Connector Collar  
 (1) 8oz. Industrial Vinyl Adhesive


# Ultra-Berm Builder®

## INSTALLATION INSTRUCTIONS

1. The floor must be clean of debris. Any build-up of grease and oil must be removed. Failure to do so may result in premature failure of The Ultra-Berm Builder® sealant.
2. To apply The Ultra-Berm Builder® over frost cracks and form separations, first fill these areas with caulking.
3. Apply 2 continuous beads of caulking on the bottom of the The Ultra-Berm Builder® approximately 1" in from its side and ends, along its entire length.
4. Place The Ultra-Berm Builder® and apply pressure to its entire length to seal it to the floor. Note: To ensure proper sealing on uneven surfaces, you may need to apply extra sealant and also more direct pressure .
5. To add sections or attach corners to the The Ultra-Berm Builder® , apply vinyl adhesive to the built-in vinyl cover and the end of the berm. Then mold the vinyl cover over the berm end and hold in place (approximately 30 seconds).

### IMPORTANT NOTES:

1. If it has been stored coiled, let the Ultra-Berm Builder® lie flat for 2 hours before installing it.
2. Let the Ultra-Berm Builder® cure (sealant and glue) for at least one hour before use.
3. To cut the Ultra-Berm Builder®, use a utility knife along with a straight edge.
4. To remove the Ultra-Berm Builder®, scrape with a flat-blade shovel and use silicone remover to clean caulking from base.

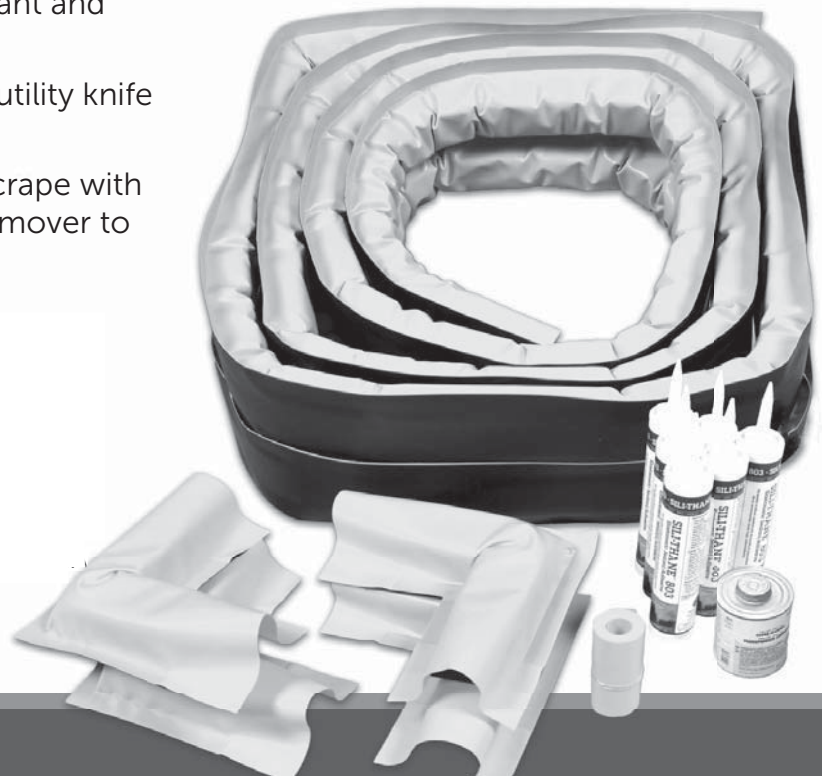

PH 630-629-6600 - FX 630-629-3690  
1195 W. FULLERTON AVE. - ADDISON, IL 60101  
WWW.THECARYCOMPANY.COM